

Measure the wheel thickness from the bottom of the lug seat to the wheel/hub mounting face

